



EVO-1070


EVO MFG Rear Rockskin Corners



NOTES, Please Read: Aftermarket taillights are required and sold separately. This kit requires drilling into the body of your vehicle. Due to vehicle variances from the factory, the RockSkins will require finesse and possibly adjustments to its shape for fitment. You WILL need to clamp these to the body, thereby pulling the Rear RockSkins to your vehicle. They will not just directly line up with the complex contours of the vehicle. If you do not have this ability, or are intimidated with this install process, or are not willing to accept the responsibility of YOU making these mount to your vehicle, DO NOT proceed. If it was easy, everyone would be doing it. Install/test fit Armor before painting/powder coating. Paint/Powder Coat all surfaces before final installation

1. Remove gas cap

2. Pull to remove circular gas filler cover. The neck of the filler tube is held in by the rubber ring around the neck and the cover plate. Separate the neck from the plate
3. Remove factory taillights and license plate mount
4. On driver side hold EVO Driver Side RockSkin (part with large circle for gas fill) to driver side rear fender.

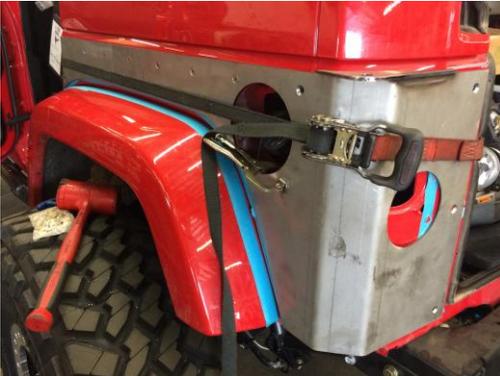

5. Use a large C-clamp through the rear taillight hole in body and clamp RockSkin to body. The use of a good ratchet strap attached to the door striker and tailgate striker will aid in pulling the rockskin to the body. (See Photo)

6. Continue clamping Rockskin until you have a satisfactory edge between the fenders and door line.



7. Mark all holes to be drilled.
8. Drill all holes with 3/8" drill bit. (step drills work really well, you want the hole to be just undersized so the nutserts will insert into the drilled hole with a small amount of resistance) light tap of the hammer.



9. Install nutserts into drilled holes. Fully thread the long 1/4" bolt with nut into the nutsert as seen in photo. With wrenches hold the bolt stationary and turn the nut 2 - 3 turns making sure that the nutsert does **NOT** turn. (There are tools specifically designed for installing these nutserts. Please

call for more information if you would like information on where to purchase this tool, they make install much easier)



10. With all nutserts installed, install RockSkin to fender with supplied ¼-20 Stainless flat head screws
11. Repeat last seven steps on passenger side (no gas filler)
12. Using the RockSkin as a template, cut the rear body in the circle of the RockSkin. Use a body saw, plasma cutter (be very careful of wiring and flammable materials) etc.



Nutsert tool / Thread insert tool can be found online at such places as Amazon, Harbor Freight, and many other tool supply companies web sites.



**UPON OPENING YOUR PACKAGES,
INSPECT THE CONTENTS IMMEDIATELY.**

If you have any missing or damaged parts, or are missing the hardware pack, contact EVO Manufacturing immediately at (714) 879-8913. EVO Manufacturing is not responsible for claims of missing or damaged parts if notified more than 15 days after delivery, proof of purchase is required.

**DO NOT POWDERCOAT, PAINT, ETC ANY
OF YOUR PARTS BEFORE PERFORMING A
TEST FITMENT FIRST.**

Any damaged or defective parts must be identified before powdercoating or painting the parts. EVO Manufacturing is not responsible for any powdercoating or painting related costs of parts that were not properly test fitted prior to powdercoat or paint.

EVO Manufacturing

1835 W Commonwealth Ave Fullerton CA 92833 (714) 879.8913